

Y-FCT

Ø8 Flexible Rogowski coil

- High linearity from 1A to 100kA
- Wide dynamic range
- Very useful with large size or awkward shaped conductors or in places with limited access
- No danger from open-circuited secondary
- Not damaged by large overloads
- Non-intrusive, no power drawn from the main
- Measurement uniformity at any position of the conductor inside the coil
- Excellent degree of rejection to the external current conductor

Feature

Y-FCT is a flexible current transducer based on Rogowski principle, particularly suitable for measurement in combination with portable devices. Y-FCT coils are available in different sizes and can be supplied according to customer's design, therefore they can be used in all those applications, in which traditional transducers are not fitting due to its size and/or weight.

Due to its specific features, flexible Rogowski coil is an extremely confortable solution for current measurement and can be used in a number of cases where traditional current transducer is not the adequate solution.

Y-FCT coil is provided with a shield against the influence of external magnetic fields, therefore it grants a stable measurement from low currents to hundreds of kA. The Rogowski coils must be connected to an electronic integrator

for 90° phase shift compensation and frequency equalization. Our DIN-RAIL and panel meters can interface Rogowski

coils directly without the need of the external integrators. This is an advantage because there is no external boxes or any power supply with consequent ease of use. The particular features of the Rogowski coils combined with the extremely flexible input programming of our portable meters, allow to carry out measurement by all applications.

Advantage

- Calibrated to 0.5%
- 8mm section easy to install
- Two layers shielded
- Lower zero drift down to 0.1mV

Related Products

S1 D1 S9 SW A01 A05 ME631 ME432

Applications

- Measuring devices, lab instrumentation
- Power monitoring & control systems
- DC ripple measurement
- Harmonics and transients monitoring
- Power meter,Power analyzer sensor

What is a Rogowski coil?

Rogowski coils have been used for the detection and measurement of electric currents for decades. They are based on a simple principle: an "air-cored" coil is placed around the conductor in a toroidal fashion and the magnetic field produced by the current induces a voltage in the coil. The voltage output is proportional to the rate of change of current. This voltage is integrated, thus producing an output proportional to the current. By using precision winding techniques, especially developed for the purpose, the coils are manufactured so that their output is not influenced by the position of the conductor within the toroid, and to reject interference from external magnetic fields caused, for example, from nearby conductors.Basically, a Rogowski coil current measuring system consists of a combination of a coil and conditioning electronics.Rogowski coil current transducers are used for the AC measurement.

They can be used in similar circumstances to current transformers but for many applications they have considerable advantages:

- Wide dynamic range.
- High linearity.

• Very useful with large size or awkward shaped conductors or in places with limited access. Thanks to the structure without hard core, the coil can be easily manufactured according to the application or to the available space.

• Unlike traditional current transducers, there is no danger from open-circuited secondaries.

• They cannot be damaged by large overloads.

• They are non-intrusive. They draw no power from the main circuit carrying the current to be measured.

• They are also light weighted and in some applications are light enough to be suspended on the conductor being measured.

The transducer does not measure direct currents but, unlike a current transformer, it can carry out accurate measurements of AC component even if there is a large superimposed DC component, since there is no iron core causing saturation. This feature is particularly useful for measuring ripple currents for example in battery charging systems.

www.myj-sensores.com

MEATROL® Measure life, Control future

SHANGHAI PINYAN M&C TECHNOLOGY CO.,LTD ROGOWSKI TECHNOLOGY(SHANGHAI) CO.'LTD

Specification

MODEL		Y-FCT-200	Y-FCT-350	Y-FCT-510	Y-FCT-800	
Coil length		200mm	350mm	510mm	800mm	
Window size		50mm	100mm	150mm	240mm	
Reference Rated current		600A	1000A 3000A		6000A	
Coil Resistance		140 (+/-10) Ω	210 (+/-10) Ω	290 (+/-10) Ω	430 (+/-10) Ω	
Weight		140g	150g	160g	180g	
Calibrated		85mV/kA@50Hz 100mV/kA@60Hz			50mV/kA@50Hz	
	Uncalibrated	110mV/kA@50Hz				
Rea	ad Accuracy	Calibrated <0.5% (central position, 25℃) Uncalibrated < 5% tolerance (central position, 25℃)				
Maximum current measurable		100kA				
Coil Resistance		from 100 to 250 Ω				
Coil Section		8mm				
Lead length		2meter				
То	moratura	Uncalibrated 200ppm/C				
Te	mperature	Calibrated 300ppm/C				
Po	sition Error	\pm 1% maximum				
Output on 0A (zero drift)		≤0.05mV				
Р	hase error	≤0.5°				
Linearity		±0.2% of reading				
Bandwidth		1Hz to 100kHz(-3dB)				
Operating temperature		-30℃ to 80℃				
Storag	ge temperature	-40°℃ to 90°℃				
		Other require	ements, please contac	t us to OEM.		





Position sensitivity

Conductor Position	Typical Error(%)
Adjacent to the center of coil	0.2%
Adjacent to the inside coil	<1%


Materials

Cail	Thermoplastic rubber		
Coil	flame retardant UL 94 V-0 rated		
Couplings	PC UL 94 V-O rated		
Color(coil)	Orange, Yellow, Red, Green, Blue		
Shielded	100% coil, 100% output cable		

Safety

	CE marked	
	Complies with	
Certifications	LVD EN 61010-1:2010	
	EMC EN 61326-1:2013	
	IP65	
Voltage inculation	Coil: 2000V	
Voltage insulation	Signal cable:1000V	
Safety	1000V CATIII ,600V CATIV	



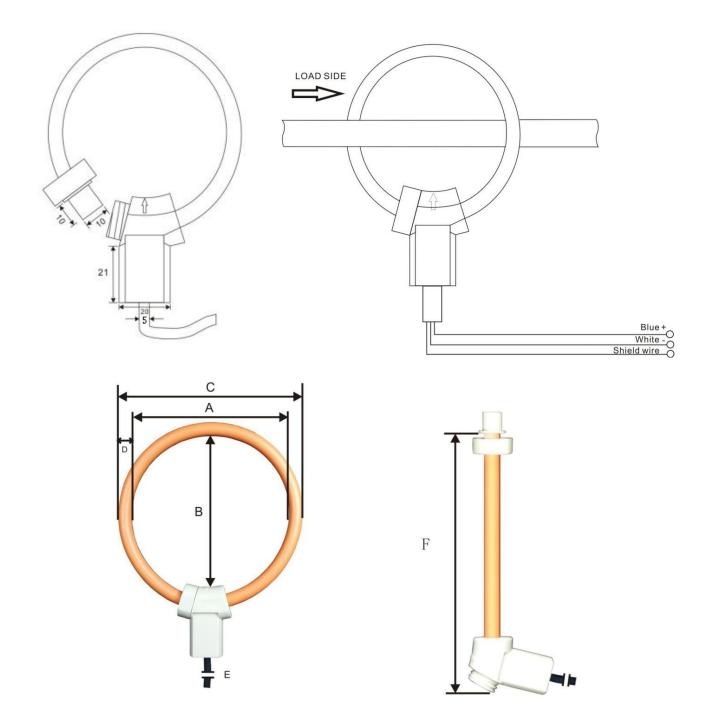

Dimensions tolerance:

A,B,C,F: \pm 5mm, D: \pm 0.2mm,E: \pm 10mm

Dimensions(mm)	Y-FCT-200	Y-FCT-350	Y-FCT-510	Y-FCT-800
A.Windows size A	50	105	155	245
B.Windows size B	60	100	150	240
C.Coil O.D.	66	121	171	261
D.Coil section			8	
E.Lead Cable Total Length	2000			
F:Coil length	200	350	510	800

ROGOWSKI COIL Y-FCT

Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly!Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications.Ensure you get up-to-date technical information that can be found in the latest associated datasheet under <u>www.rogowski.cn</u>

Caution!Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage!

The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training, The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment the respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturers' operating instructions.

Caution!Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (e.g. primary conductor). The user shall ensure to take all measures necessary to protect against electrical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation. A protective enclosure or additional insulation barrier may be necessary. Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.

WARING!

Do not stress the coil by applying any kind of mechanical force(ie.twisting,puncturing,excessive pressure,tight bending,etc.) which will dramatically degrade the device's accuracy.



Order code

Coil:

Coil Model	Coil diameter (mm)	Output ratio and tolerance	Signal cable length
	Code:200(Typical rated 500A)	Code:110	
	Code:350(Typical rated 1500A)	110mV/kA@50Hz±5%	
Code:Y-FCT	Code:510(Typical rated 3kA)	Code:100	
	Code:800(Typical rated 10kA)	100mV/kA@50Hz±0.5%	
	Y-FCT code is length.	Code:85	
	Code:100(Typical rated 1kA)	85mV/kA@50Hz±0.5%	
Code:NRC	Code:150(Typical rated 3kA)	Code:50	
	Code:200(Typical rated 6kA)	50mV/kA@50Hz±0.5%	
Code:MRC	Code:16(Typical rated 100A) Code:24(Typical rated 300A) Code:36(Typical rated 600A)	Code:60 60mV/kA@50Hz±5% Code:50 50mV/kA@50Hz±0.5%	Code:-2m Code:-5m Code:-10m
Code:SRC	Code:50 Code:100 Code:150	Code:360 360mV/kA@50Hz±5% Code:333 333mV/kA@50Hz±0.5% Code:100 100mV/kA@50Hz±0.5% Code:85 85mV/kA@50Hz±0.5% Code:50 50mV/kA@50Hz±0.5%	Code:-20m
	Other requirement of	could be OEM	

Final Code=Coil model+Coil length(MRC NRC is diameter)+Output ratio tolerance+Signal cable length For example:

Y-FCT-350-100-2m is Y shape connector,coil length 350mm,output 100mV/kA@50Hz 0.5% tolerance,signal cable length is 2meter.



Integrator:

Integrator	Output form	Output value	Rated current	Power supply
Code: D1 (DIN-RAIL integrator)	Code: .1(AC voltage output) Code: .2(DC voltage output) Code: .3(4-20mA output)	Code: -333(333mV) Code: -1(1V) Code: -5(5V) N/A		Code: -12(12V DC) Code: -24(24V DC)
Code: S9 (mini integrator)	Code: .1(AC voltage output) Code: .2(DC voltage output)	Code: -333(333mV) Code: -1(1V) Code: -3(3V)	Code: -600A Code: -1kA Code: -3kA	Code: -12(6-12V DC) Code: -24(24V DC)
Code:S1 (high accuracy integrator)	Code: .1(AC voltage output) Code: .2(DC voltage output)	Code: -333(333mV) Code: -5(5V) Code: -10(10V)		Code: -12(4-12V DC) Code: -24(24V DC)
	Code: .3(4-20mA output)	N/A		
Code: ATP-01 (1A output three phase integrator)	N/A (0-1A)	N/A	Code: -6kA	Code: -12(12V DC) Code: -24(24V DC)
Code: A01 (1A output integrator)	N/A (0-1A)	N/A		N/A(85-265V AC DC)
Code: A05 (5A output integrator)	N/A (0-5A)	N/A		N/A(85-265V AC DC)
Code:HF (high frequency integrator)	N/A (0-10VAC peak)	N/A	Code: -1kA(1kA/1V) Code: -10kA(10kA/1V)	N/A(4-12V DC)
	Other requ	irement could be OEM		

Final Code=Integrator+Output form+Output value+Rated current+Power supply

For example:

D1.1-1-500A-12 is D1 integrator,AC voltage output,500A rated,output 1V,power supply 12V DC

A01-1kA is A01 integrator, rated 1kA, output 1A, power supply 85-265V AC DC